



G131RX

Electrical

Frequency Hz	Phases	Voltage Volts	Prime		Standby	
			kVA	kW	kVA	kW
50	3	400/230	125.0	100.0	137.5	110.0

Frequency Hz	Phases	Voltage Volts	MCB Rating Amps	ATP Rating Amps	Rated Speed RPM
50	3	400/230	250	250	1500

Power Factor

3 Phase	0.8
1 Phase	1

All ratings are to standard reference conditions ISO8528

Prime: This rating is for the supply of continuous electrical power, at variable load, in lieu of commercially purchase power. There is no limitation on the annual hours of operation and 10% over load power can be supplied for 1 hour in 12.

Standby: This rating is for the supply of continuous electrical power, at variable load, in the event of a utility power failure. No overload is permitted.

"Stage IIIa" models are only emissions compliant at 50Hz Prime Power in accordance with 97-68EC

Load Acceptance	GI Standard
1st Step size (As % of Rated Load) 50Hz	41

Alternator		HM250BI
Poles		4 pole
Winding Connections		Star
Insulation		Class H
Enclosure		IP23
Exciter System		Self-regulating brushless
Voltage Regulator		AVR
Steady State Voltage Regulation		+/- 1.0% (GI)
Bearing		Single bearing sealed
Coupling		Flexible disc
Cooling		Direct drive centrifugal blower fan
Coating		Winding Protection Grey

Engine		
1500 RPM		
Output Rating (PRP)	kW	113
Output Rating (Standby)	kW	124.3
Manufacturer and Model		JCB
Fuel		Diesel
Injection		Direct
Aspiration		Turbo Charged
Cylinders		4
Bore and Stroke	mm	106 x 135
Displacement	l	4.765
Cooling		Water
Engine Oil Specification		CH4 15W40
Compression Ratio		17.5:1
Engine Oil Capacity		14
Coolant Capacity		18
Governor		Electronic
Air Filter		Two stage with restriction indicator
Engine Oil Consumption	100% Load	0.1% of fuel consumed

Fuel Consumption		
1500 RPM		
100% Load Prime	l/h	30.9
75% Load Prime	l/h	23.5
50% Load Prime	l/h	15.4
100% Load Standby	l/h	31.8

Exhaust System			
Maximum Temperature 100% Standby	°C	50Hz	583
Exhaust Gas Flow 100% Standby	m ³ /min		568
Maximum Allowed Back Pressure	kPa		10
Exhaust Flange Size	mm	72.5	

Air System			
Intake Air Flow 100% Standby	m ³ /h	50Hz	506
Total Cooling Air Flow 100% Standby	m ³ /s		234
Alternator Fan Airflow	m ³ /s		31

Starting System			
Starter Motor	kW	3	
Battery Capacity	Ah	120	
Number of Batteries		1	
Auxiliary Voltage	V	12	


Fuel System			
Diesel Specification		EN590	
Standard Fuel Tank Capacity	l	288	

Weight and dimensions			
Length	mm	2810	
Width	mm	1150	
Height	mm	1793	
Shipping Volume (sea ready)	m ³	5.79	
Weight (standard build excluding fuel)	Kg	1825	

Sound Pressure			
LpA (7m)	50Hz	dB(A)	66

Control Panel - JCB CPI (Standard)


The JCB CPI control system is digital and has the capability to control, monitor and protect the generator. The display allows the user to easily monitor the status of the generator through an LCD display and LED outputs. It enables control of the generator operations through soft touch push button functionality and multi lingual capability

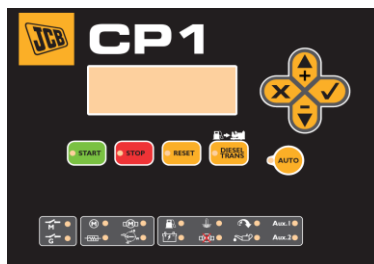

Control Panel - JCB CP2 (Optional)


The JCB CP2 control system is digital and has the capability to control, monitor and protect the generator the same as the JCB CPI panel but additionally incorporates the functionality of the control module of the JCB ATP1.

The JCB CP2 Panel constantly monitors the mains and has to be hardwired into both mains and generator contactors. The display allows the user to easily monitor the status of the generator as well as controlling generator operation

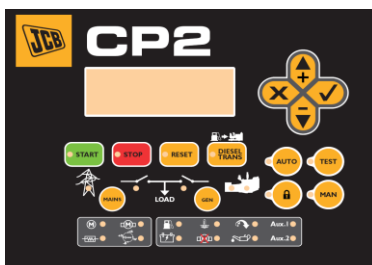

Control Panel - JCB ATP1 (Optional)

The JCB ATP1 control module is integrated into an Automatic Transfer Switch, which provides automatic mains failure capability. The JCB ATP1 can communicate with a generator through either 2 wire start volt free contactors or CANBUS through CPI to ATP1 (not compatible with CP2). The JCB ATP1 when connected via CANBUS to the JCB CPI will give control functions and display generator information.

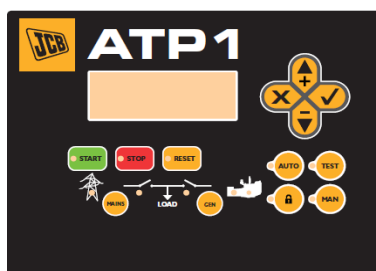

JCB Power Products LTD Rokeceter Staffordshire ST14 5JP, +44 (0) 1889 590312, www.jcbpowerproducts.com

JCB reserves the right to change specifications without notice. Illustrations shown may include optional equipment and accessories

SPEC Issued 17/04/2013

Control Panel Features	CPI	CP2	ATPI
Generator			
Phase to Phase Voltage	●	●	●
Phase to Neutral	●	●	●
Phase Amperage	●	●	●
Frequency	●	●	●
kVA	●	●	●
Kw	●	●	●
kVAr	●	●	●
Power Factor	●	●	●
Mains			
Phase to Phase Voltage	x	●	●
Phase to Neutral	x	●	●
Phase Amperage	x	●	●
Frequency	x	●	●
kVA	x	x	x
kW	x	●	●
kVAr	x	x	x
Power Factor	x	x	x
Engine			
Coolant Temperature	●	●	x
Oil Pressure	●	●	x
Fuel Level Percentage	●	●	x
Battery Voltage	●	●	x
Engine RPM	●	●	x
Battery Charge Alternator Voltage	●	●	x
Engine Alarms			
High Coolant Temperature	●	●	x
Low Oil Pressure	●	●	x
Low Coolant Level	●	●	x
Unexpected Shutdown	●	●	x
Failure to Stop	●	●	x
Battery Voltage Failure	●	●	x
Battery Charge Alternator Failure	●	●	x
Over Speed	●	●	x
Under Speed	●	●	x
Failure to Start	●	●	x
Low Fuel level	●	●	x
Emergency Stop	●	●	●
Alternator Alarms			
High Frequency	●	●	●
Low Frequency	●	●	●
High Voltage	●	●	●
Low Voltage	●	●	●
Over Amperage	●	●	x
Short Circuit	●	●	x
Symmetry Between Phases	●	●	●
Incorrect Phasing	●	●	●
Inverse Power	●	●	x
Over Load	●	●	x
Generator Drop	x	x	●
Standard ● : Not Available x : Optional Δ			

JCB Power Products LTD Rocester Staffordshire ST14 5JP, +44 (0) 1889 590312, www.jcbpowerproducts.com

JCB reserves the right to change specifications without notice. Illustrations shown may include optional equipment and accessories

SPEC Issued 17/04/2013

Control Panel Features	CPI	CP2	ATPI
Measurement			
Total Hours Run	●	●	●
Kilowatt Meter	●	●	●
Number of Starts	●	●	●
Number of Start Failures	●	●	●
Service Indicator	●	●	●
Connectivity			
Remote Screen (CAN)	△	△	△
Local Monitoring (CANBUS)	△	△	△
Local Monitoring (CANLAN)	△	△	△
Remote Monitoring (CANModem – Fixed)	△	△	△
Remote Monitoring (CANModem – GSM)	△	△	△
Features			
Events History	●	●	●
External Start capability	●	●	●
Programmable Start Restriction	●	●	●
Mains Failure Start	●	●	●
Generator Contact Activation	●	x	x
Mains and Generators Contact Activation	x	●	●
Fuel Transfer Control	●	●	x
Engine Temperature	●	●	x
Manual Override	●	●	x
Programmable Alarms	●	●	x
Generator Start in Test Mode	●	●	x
Programmable Outputs	●	●	x
Multi Lingual	●	●	●
Programmable Timer	●	●	x
Synchronisation	●	●	x

Synchronisation	DSE8610	DSE8620	DSE8660
DEEP SEA Panels	△	△	△

Canopy/Skid	
Lockable Maintenance Access Doors	●
Control Panel Viewing Window	●
Fork Pockets	●
Single Lift Point	●
Rental Sledging Base	●
Bunding	●
Open Frame	x
Bund Level Indicator	△
50mm Rock Wool Sound Insulation	●
Yellow Paint	●
Red Paint	△
White Paint	△

Standard ● : Not Available x : Optional △

Mechanical Features

Cooling Pack	●
Air Filter	●
Mechanical Governor	●
Electronic Governor	Δ
High coolant Temperature Sender	●
Low Oil Pressure Sender	●
Advanced coolant Temperature Sender	Δ
Advanced Oil Pressure Sender	Δ
Oil Temperature Sender	●
Water Level Sender	Δ
Radiator Guards	●
Hot Component Guards	●
Manual Oil Drain Pump (fitted in canopy)	●
Water Jacket heater	●
Battery Isolator	●
Battery Type	Gel
Battery Size (Ah)	44
Number of Batteries	1
Battery Charger	●
Manual Fuel Fill	●
Electric Fuel Fill	Δ
Racor Fuel Filter (no alarm)	x
Racor Fuel Filter (with alarm)	x
Pre-filter with Separator	●
External Spark Arrestor	Δ
Fuel Level Sender	●
Fuel Heater	Δ
External Fuel Fill (belly tank)	●
3 Way Fuel Valve and Coupling Nest	●
Residential Silencer	●
Exhaust Gas Compensator	x
Industrial Silencer	x

Fuel Tank Options

	Material	Capacity (l)
Standard Tank	Plastic	288
Tank Option I	Steel	450

Standard ● : Not Available x : Optional Δ

Electrical Features

AVR DSR	●
AVR DER	x
Winding Protection Standard	x
Winding Protection Standard +	x
Winding Protection Grey	●
Winding Protection Total	△
Winding Protection Total +	△
MAUX	●
PMG	△
Anti-Condensation Heater	△
Miniature Circuit Breaker (integrated busbar)	x
Moulded Case Circuit Breaker (with integrated busbar)	●
Earth Leakage Protection (shunt trip)	●
Synchronisation	△
Socket Box (inclusive of heavy duty busbar & micro switch)	●
Preparation for Earth Spike	●
Optional Voltages	△
Remote Screen	△
Panel Door Micro Switch	●
Copper Busbar/Tails	●
Emergency Stop Button	●
External Emergency Stop Button	●

JCB Communication and Control

KSI	x
CPI (inclusive of program timer)	●
CP2 (inclusive of program timer)	△
ATP	△
CAN/USB	△
CAN/LAN	△
CAN RS-232	△
Remote Modem	△

Reference Standards

JCB Generators are CE certified and conform to the following Directives (subject to a country requiring such standard):

- EN 12100, EN13857, EN60204
- 2006/42/CE Machinery safety
- 2006/95/EC Low voltage
- 2004/108/CE Electromagnetic compatibility
- 2000/14/EC Sound Power Level (amended by 2005/88/EC)
- 97/68/EC Emissions(amended by 2002/88/EC & 2004/26/EC)
- Power according to ISO 8528 and ISO 3046
- Ambient reference conditions 1000mbar, 25°C, 30% relative humidity ISO3046

Information based on standard specification equipment unless otherwise stated.

JCB Power Products LTD Rocester Staffordshire ST14 5JP, +44 (0) 1889 590312, www.jcbpowerproducts.com
 JCB reserves the right to change specifications without notice. Illustrations shown may include optional equipment and accessories

SPEC Issued 17/04/2013